

LED CANOPY LIGHT

INSTRUCTION MANUAL

Please read the user manual carefully and follow it. This will help to prevent damage of the product, prolong its lifespan; And it will be helpful for your normal use and maintenance, to ensure that your life safety. Please keep the manual properly.

Part No.	Input Voltage	Frequency	Power	Rated Current
CP05-120	AC120-277V	50/60Hz	120W	1.1A
CP05-150	AC120-277V	50/60Hz	150W	1.38A
CP05-180	AC120-277V	50/60Hz	180W	1.65A

WARNINGS

THE LED CANOPY MUST BE INSTALLED IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL CODES BY PERSONS FAMILIAR WITH THE INSTALLATION, OPERATION, AND/OR MAINTENANCE OF THE PRODUCTS AND THE HAZARDS INVOLVED. THE LED CANOPY MUST BE INSTALLED WITH UL LISTED CONDUIT FITTINGS.

1. Risk of fire or electric shock.
 - 1-1 Make sure the working voltage of LED CCanopy is under its rated voltage.
 - 1-2 Make sure the accessories and wires are completed and intact during the installation.
 - 1-3 Installation requires knowledge of electrical systems. For install by qualified electrician only.
Do not attempt installation if not qualified.
 - 1-4. This fixture should only be installed in place of existing luminaries that have the construction features and dimensions specified in this manual.
2. Do not expose any wire to edge of sheet metal and/or other sharp objects that may cause damage or abrasion.
3. Do not change existing open holes or create any additional open holes in the fixture or its components during installation.

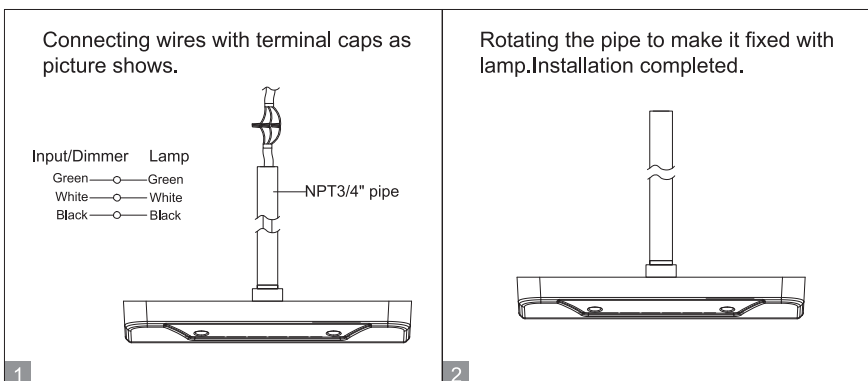
CAUTIONS

1. Be certain electrical power is OFF before and during installation and maintenance.
2. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
3. Do not use the LED CCanopy near heating appliances/ elements.
4. The input voltage and lamps should be matched after connecting the power line, please make sure the wiring section is insulated.

LED CCanopy must be operated within an ambient temperature range of -22°F to 113°F (-30°C to + 45°C).

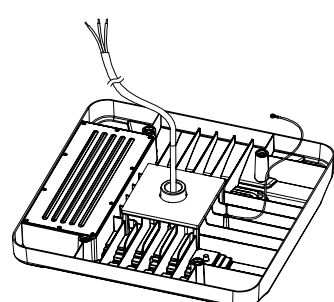
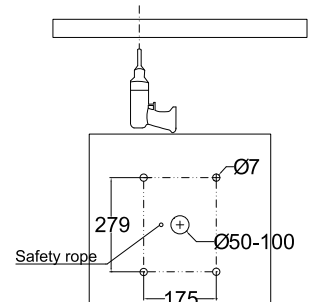
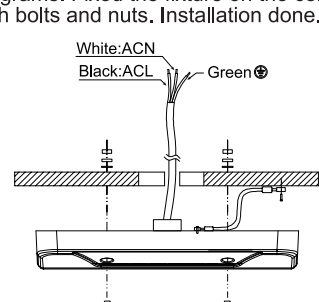
LED CCanopy is not intended for use with emergency exits.

Installation method I: Pole-pendant Installation

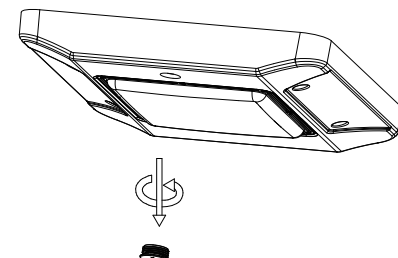
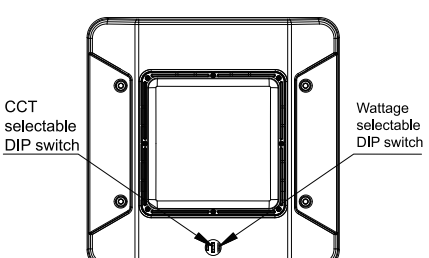
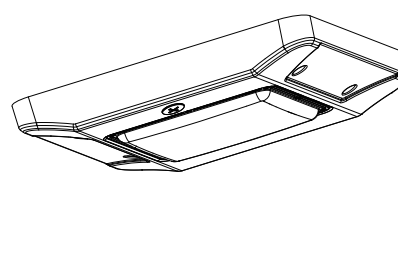


Installation Instruction

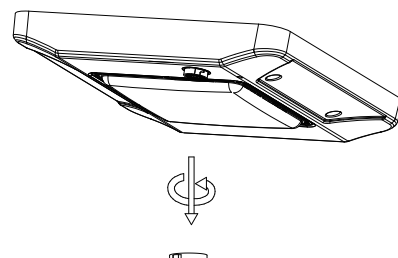
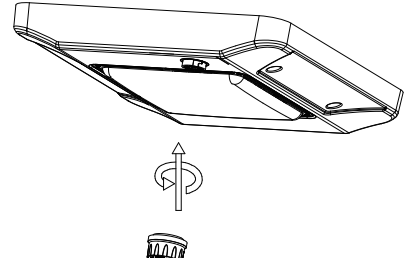
Installation method II: Ceiling Installation

<p>Secure one side of the safety cord to the back of the radiator.</p>  <p>1</p>	<p>Use the hole cutter to cut the corresponding sized holes in the ceiling.</p>  <p>2</p>	<p>Fixed the safety rope on the ceiling. Making a wiring connection according to the wiring diagrams. Fixed the fixture on the ceiling with bolts and nuts. Installation done.</p>  <p>3</p>
---	--	---

Selectable CCT and wattage function installation

<p>Unscrew the cap;</p>  <p>1</p>	<p>Adjust the CCT selectable DIP switch or the wattage selectable DIP switch accordingly;</p>  <p>2</p>	<p>Tighten the cap</p>  <p>3</p>
---	---	--

Sensing function installation

<p>Unscrew the cap;</p>  <p>1</p>	<p>Tighten the motion sensor;</p>  <p>2</p>
--	--

The Installation must be carried out by a qualified electrician.