
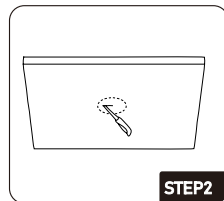


DM Regressed Commercial Downlight

INSTALLATION



NOTE: RECESSED KIT IS VOLTAGE SPECIFIC. VERIFY PROPER VOLTAGE BEFORE INSTALLATION. **FOR NEW CONSTRUCTION APPLICATIONS, BEGIN ON STEP1.**
FOR REMODEL APPLICATIONS, BEGIN ON STEP 3.

STEP 1: Install the housing frame kit in the ceiling. Adjust horizontal position by sliding housing along bar hangers.

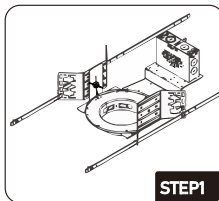



STEP 2: Open a hole according to the mounting frame diameters as following: 4inch fits 4" min. to 4.7" max.
 6inch fits 6" min. to 6.7" max.
 8inch fits 7.7" min. to 8.4" max.
 10inch fits 10" min. to 10.7" max.

STEP 3: Install the Driver Box into the junction box. Then open J-box. (For remodel application, remove J-box supply wires and existing driver / ballast)

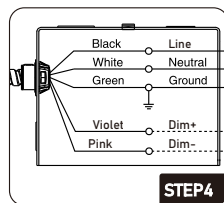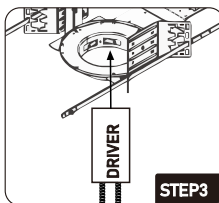



STEP 4: Wiring.

STEP 5: Close the J-box. Then secure the driver box in the ceiling by screws. Install the safety hook to the bracket hole.

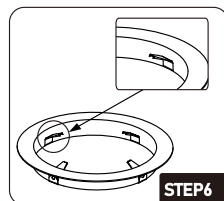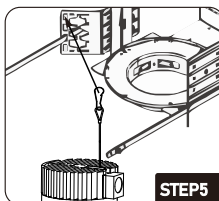

STEP 6: 4 clips are needed to be installed if the existing mounting frame don't have it.

STEP 7: Plug the black connector of LED engine to the black connector on the end of the flex conduit on the driver box. Then insert it to hole of LED engine.

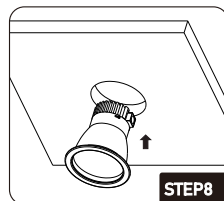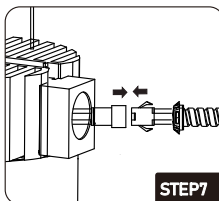

STEP 8: Install the led downlight into the ceiling. Restore power after installation is completed.

REMARK:

Ensure the mounting frame can hold the weight of LED downlight. After modification completed, attach the Lamping replacement marking label and cautionary label which provided with the retrofit kit package to the light fixture. The labels shall be visible during relamping, and after installation.